

3. Follow NEC guidelines for mounting and installation.

A When mounting remote access onto vertical surface - disconnect position "ON" must be oriented up.

5. Remote enclosure and unit ship connected by conduit as shown.

Product information is subject to change without notice.