


AFR Dimensional Information

AFR FRONT, TOP, AND SIDE VIEWS

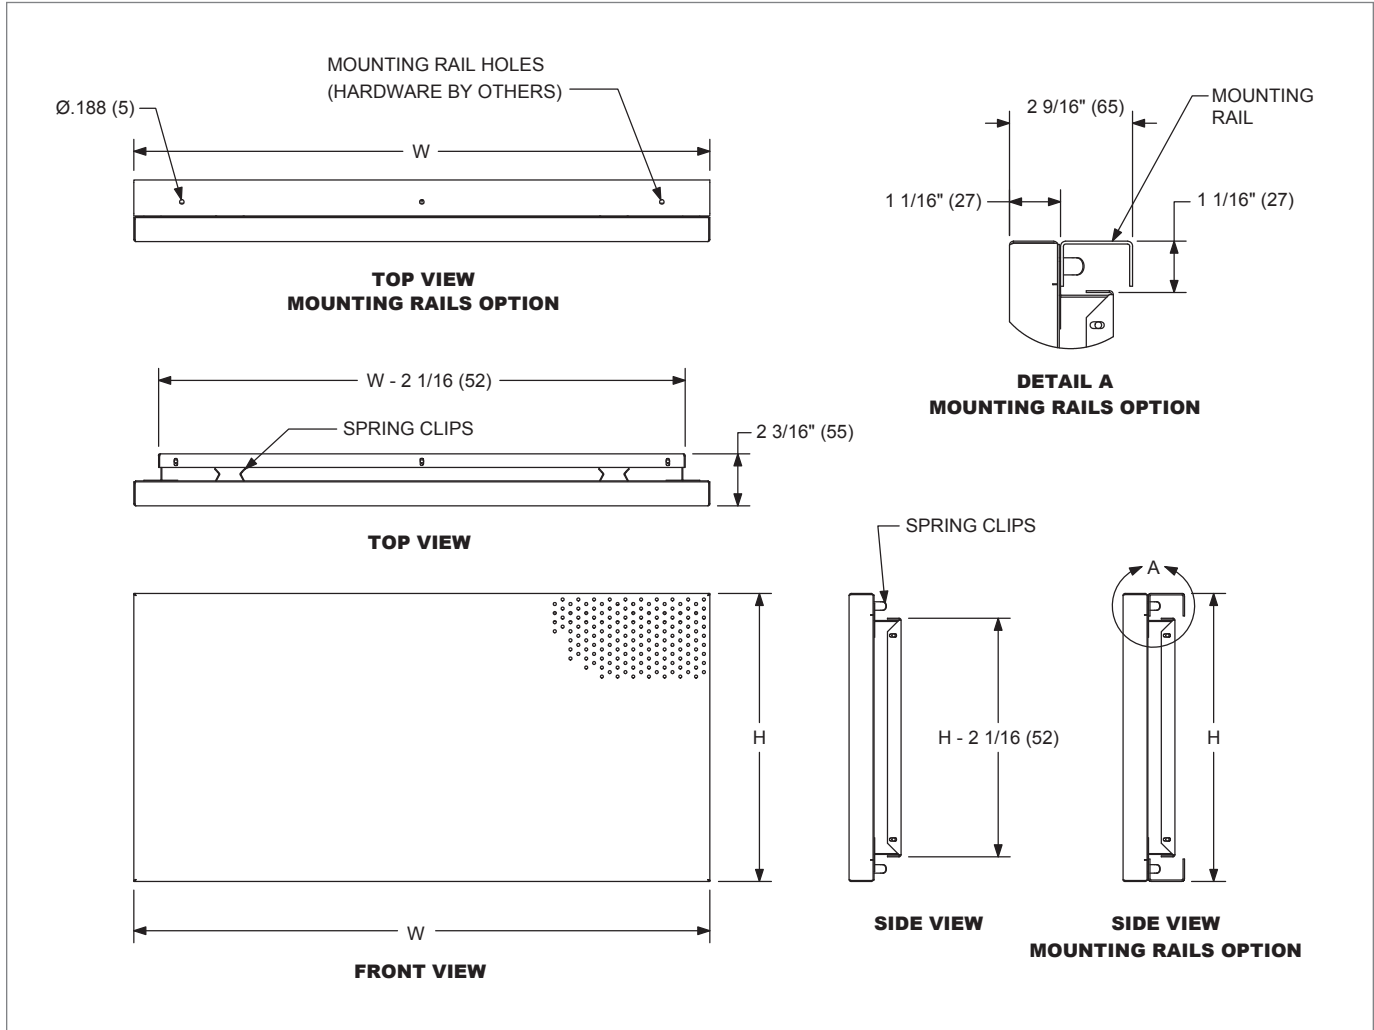


Width (W) = 8" - 48" in 1" increments.
Height (H) = 4" - 24" in 1" increments.

DISPLACEMENT VENTILATION

AFR Installation

AFR INSTALLATION VIEWS

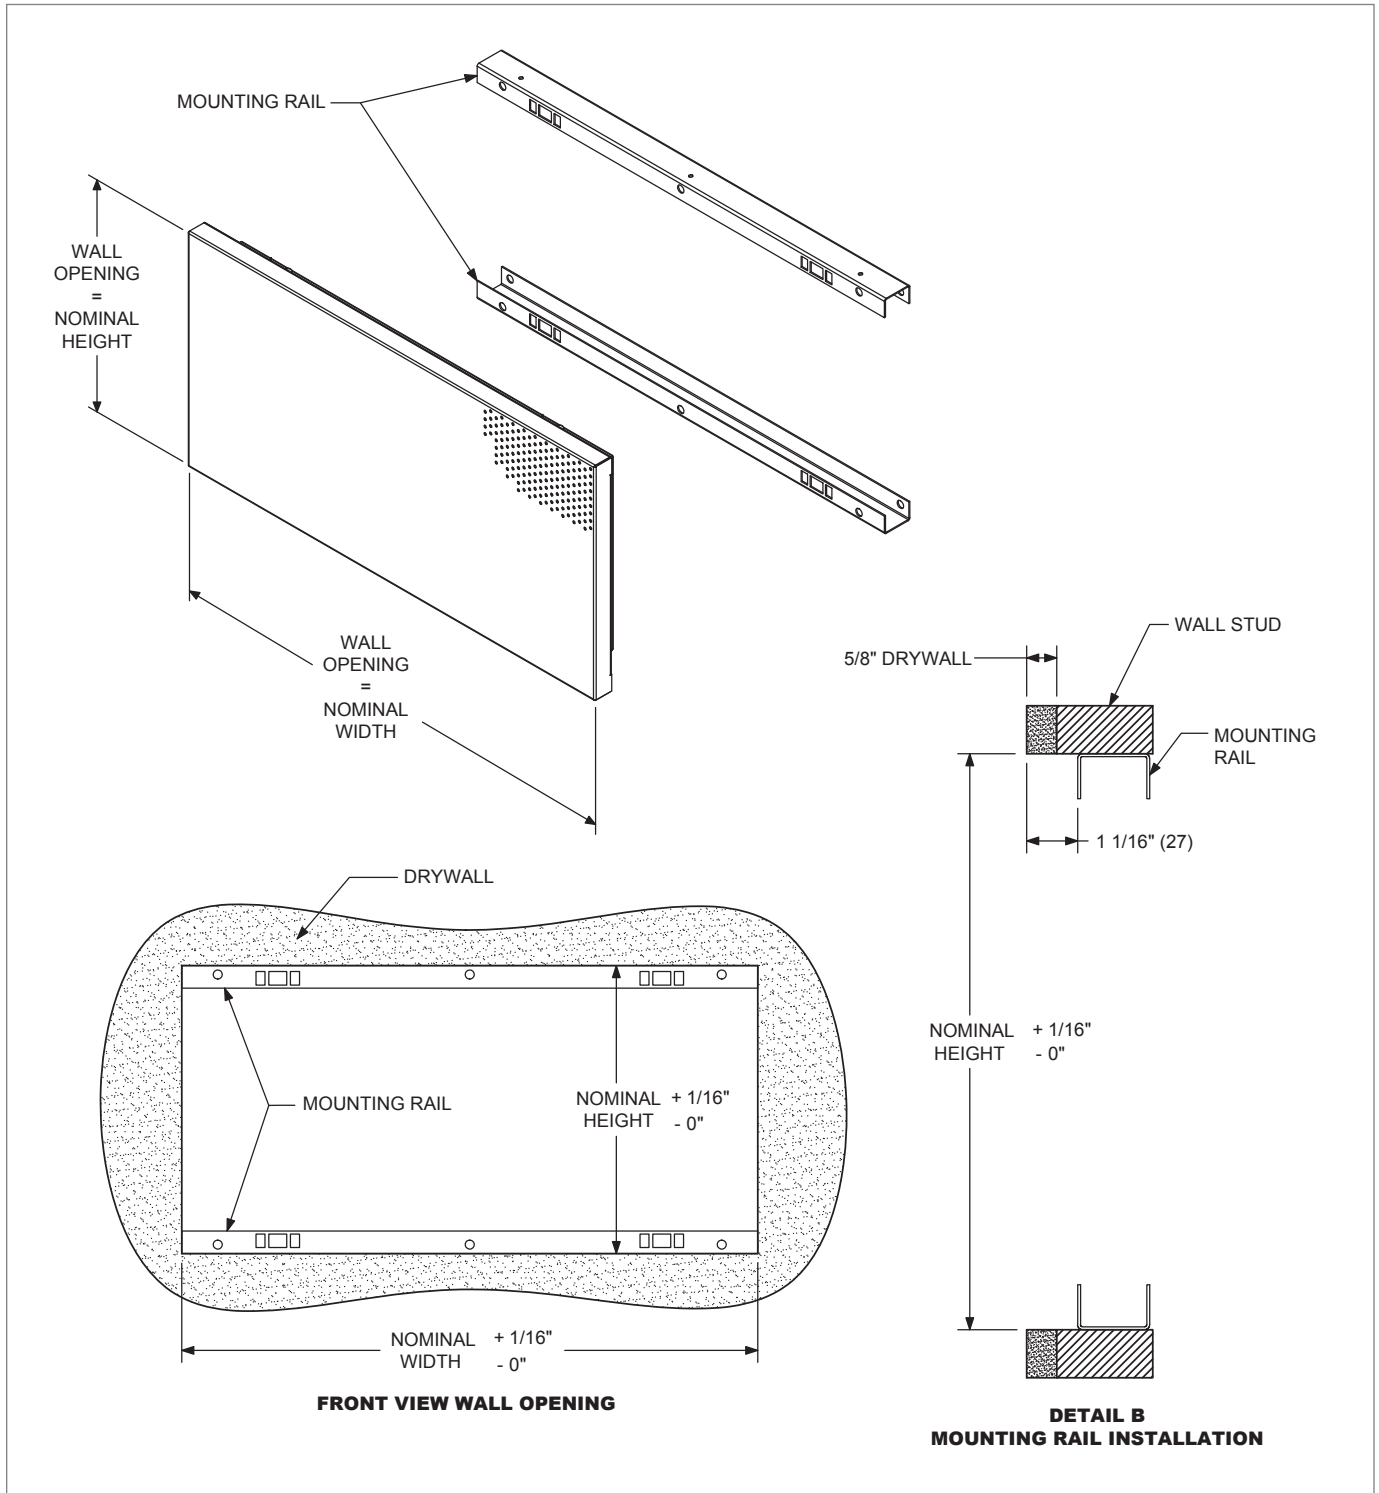

DISPLACEMENT VENTILATION

INSTALLATION

- Opening in wall shall be same dimensions as unit width and height.
- Install mounting rails in opening using mounting rail holes (fasteners by others); locate front flange 1 1/16" from face of wall. (See detail B.)
- Insert unit into wall opening such that the clips engage the mounting rails.